
DC power supply

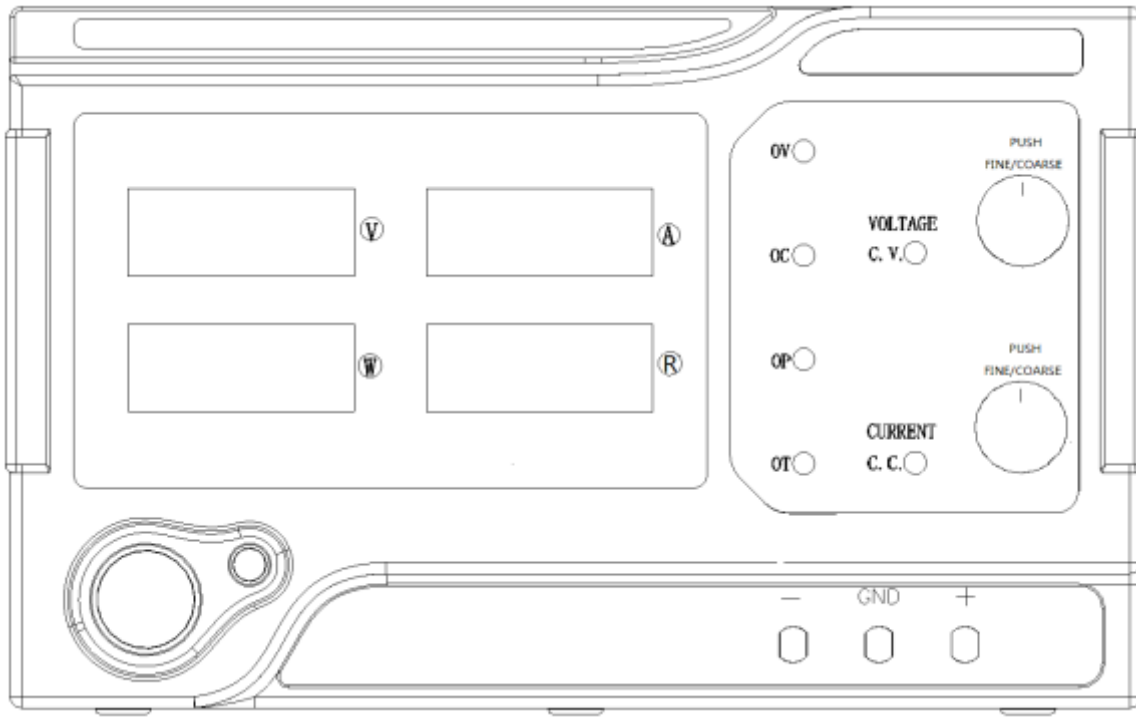

Product specifications

Table of Contents

Safetysummary.....1

Chapter I Overview.....5

Chapter II Operating specifications.....16

Chapter III Maintenance..... 21

Chapter IV Performance indicators.....23

Chapter V Declaration of toxic and hazardous substances inthe product.....26

Chapter VI Warranty service.....28

Warranty card 31

Performance indicators are subject to change without prior notice.

. Safety summary

.This section contains important safety instructions that must be followed by operating power and storage environments. In order to ensure your safety, please read the following instructions before operation to ensure that the power supply in the best working environment.

. Safety guide

	● .do not place heavy objects on the casing.
	● ...To avoid severe impact or improper disposal cause damage to the machine
General	● ..Measures to prevent electrostatic discharge should be taken when connecting the instrument.
 注意	
	● Do not block or isolate the fan vent.
	● Please do not open the machine unless

	your are a professional.
. Power supply 	● AC input voltage: 220V.10%.50Hz (110V input or 100V/220V manual switching) ● The ground wire of the source line needs to be connected to the ground to avoid electric shock
.Fuse 	● Ensure to use the correct fuse model before the startup. ● ...To prevent fire, the fuse conforming to the model and rated value should be replaced. ● Before replacing the fuse, firstly cut the power to troubleshoot the causes for damaging the fuse.
Cleaning machine	● .Firstly cut the power before cleaning. ● ...Wet the soft cloth with the warm Detergent and water. Do not spray the detergent directly. ● do not use chemical or cleaning agent

		containing abrasive products, such as Benzene, toluene, xylene and acetone.
Operating environment	●	.....Applicatio place.: indoor, prevent direct sunlight, dust and strong magnetic field
	●	Relative humidity.: <80%
	●	Elevation.: <2000m
	●	Temperature.: -10.- 40.
.Storing environment	●	Position.: indoor
	●	Relative humidity.: <80%
	●	Temperature.: -20.- 80.

Chapter I Overview

This series is a single output DC regulated power supply with LED digital display. It may display voltage, current and power simultaneously. It is portable and

small and the voltage and current may be adjusted continuously.

1.1 Functional features

- LED digital display may virtually display the power output voltage, current and power
- automatic switching regulator and flow regulator
- The control is more flexible with output control switch
- Over-voltage, over-current, over-power and over-temperature protection. The protection threshold may be set with the special computer software.
- The convenient and fast operation interface
- The temperature control fan speed

instrument is low in noise; the fan is long in life.

- Voltage and current valve can be set in advance under output shutdown state, which is easy to operate

1.2 .Front and rear panel

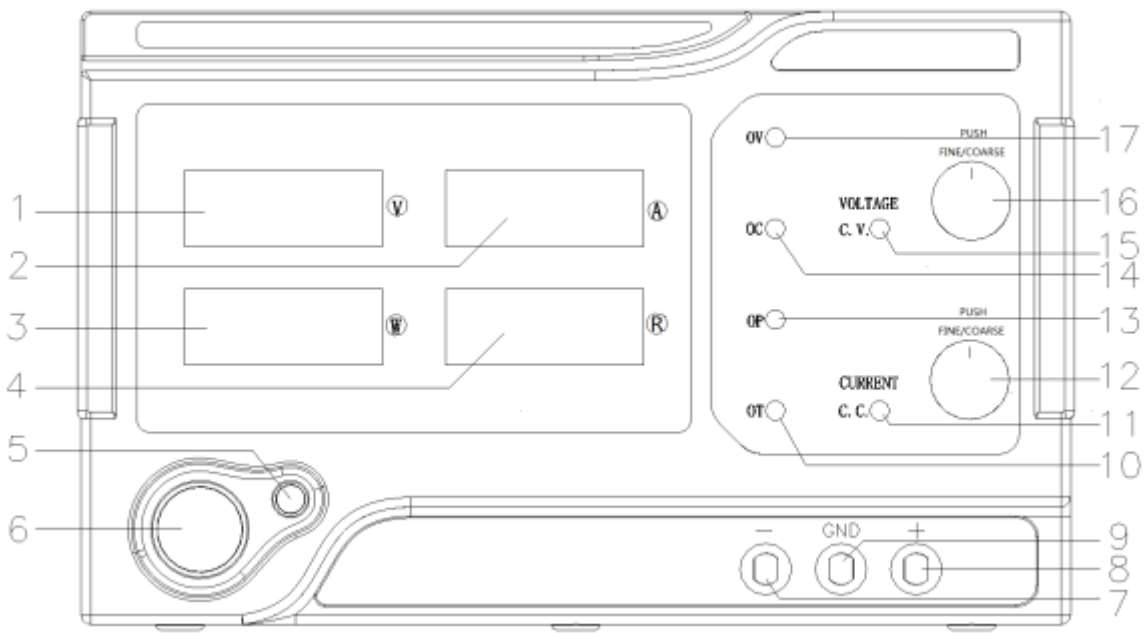


Diagram of front panel

1.Voltage display: the current output voltage (unit: V) will be displayed when opening the power output. The output status will be

displayed pre-set voltage when cutting down the output.

2. Current display: current output current will be displayed when opening the power output (unit A). The output status will be displayed pre-set current when cutting down the output.

3.Power display: the current output power will be displayed when opening the power output (unit: W); . The output status will be displayed “0. 000” when cutting down the output.

4.Equivalent load display: the current output equivalent load will be displayed when opening the power output .The Display Range is 0.000R~9999R,but it will display “----” when it exceed the normal scope.

5.Output ON/OFF key: it may directly control the power output on/off status. The green indicates the output status is on; red indicates the current output status is off.

6.Power switch: it is used to open or close the power. The status is on after pressing the switch.

7.Output negative: power output negative (-);output currnet range: ：0~10A。

8.Output positive: power output positive (+);output currnet range: ：0~10A。

9.Ground terminal: The safety ground wire terminal is connected with the power supply shell.

10.OT indicator: if the light is on, it indicates the DC source is on the Over-temperature protection status.

11. C.C indicator: if the light is on, it indicates the DC source is in the steady current status.

12. Current adjustment rotary encoder : It is used to adjust the setting value of stable current. When rotate rotary encoder clockwise,The edit bit will be added “1”. When rotate rotary encoder counterclockwise, The edit bit will be

minused “1”. The value will Carry or borrow to the high position automatically. When press the rotary encoder,it can be change the edit bit of current. When edit,the value is flashing.The range of the setting value is from zero to the maxinum value.

13.OP indicator: if the light is on, it indicates the DC source is on the Over-power protection status.

14.OC indicator: if the light is on, it indicates the DC source is on the Over-current protection status.

15. CV indicator: if the light is on, it indicates the DC source is in the stable voltage working status.

16. Voltage adjustment rotary encoder ： It is used to adjust the setting value of stable voltage. When rotate rotary encoder clockwise,The edit bit will be added “1”. When rotate rotary

encoder counterclockwise, The edit bit will be minused “1”. The value will Carry or borrow to the high position automatically. When press the rotary encoder,it can be change the edit bit of voltage. When edit,the value is flashing.

The range of the setting value is from zero to the maxinum value.

17. OV indicator: if the light is on, it indicates the DC source is on the Over-voltage protection status.

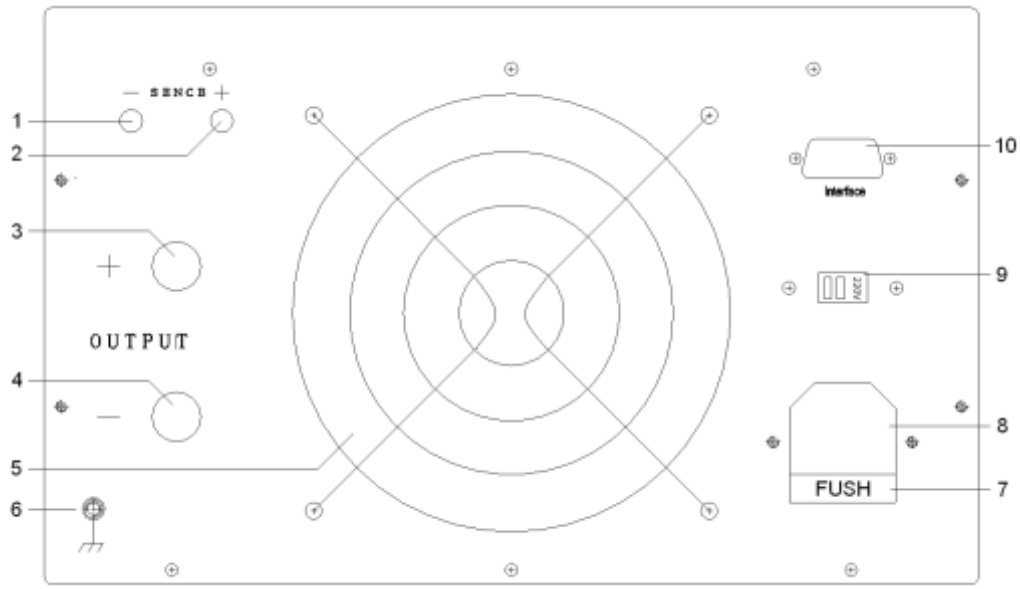


Diagram of rear panel

1. SENSE input negative: the DC’S voltage

negative when sampled. （default no the interface）

2. SENSE input postive：the DC'S voltage postive when sampled. （default no the interface）

3.Output positive: the power supply output positive (+) ;Output current range: 0~max.

4.Output negtive: the power supply output positive (-) ;Output current range: 0~max.

5.Cooling fan vent: It is used for power supply air cooling. According to current output consumption, intelligently adjust the fan speed, effectively reduce the fan noise and prolong the fan noise.

6.Ground terminal: The safety ground wire terminal is connected with the power supply shell.

7.Fuse seat: the power fuse is installed inside

and may be replaced with screwdriver.

8.Power input socket: AC power input

9.Input power switch: AC110V/220V input switch (default no switch).

10. Communication interface **:RS232/485/USB serial port seat:** it may be communicated with the control CPU of the power supply via the interface, read or set the power output (default no communication interface);

1.3 . First use

1.3.1. Connecting power

(1) input power demand

.The details of input power should refer to chapter IV Performance Indicators.

(2) check the fuse

The proper fuse has been installed when the instrument is delivered. Please use the correct fuse model before startup.

(3) .Connect power supply line of instruments

Use the power cord supplied by the attachment to connect the instrument to the AC power supply.


警告 In order to avoid electric shock, please confirm that the instrument has been properly grounded.

1.3.2. Power-on check

Press the power switch front panel, connect the power. The back light of .ON/OFF. key displays the red. The power output is in the off status. Press .ON/OFF. key and the back light of .ON/OFF. key displays green. The power has opened output.

Hint: please restart after shutdown. Please guarantee the interval of two startups is larger than 5s.

1.3.3. Output check

The output check may ensure the instruments to correctly respond to the operation of front panel and output the rated value. The output check includes the voltage output of channel load and the current output of short circuit.

(1) Output switch

To open the power output, press .on/off. key and the back light will turn to green. And then press the key to close the output and the back light will turn to red.

(2) voltage output check

a. When the instrument is in empty load, open the power key and confirm the constant current of current knob is 0;

b. Press .ON/OFF. key and open the output. When the back light turns to green, the channel is in constant voltage output status (CV light is on). Check whether the voltage

is adjusted to the maximum rated value from 0.

(3) Power output check

a. Open power key;

b. Adjust the power knob to make the power output voltage as 3-5V. and then press .ON/OFF. key to cut the output;

c. Use one wire to connect the output terminal of front panel;

d. Press .ON/OFF. key to open the voltage.

When the back light turns to green, the channel will be in constant current output status (CC indicator is on). Check whether the current is adjusted to the maximum rated value from 0.

Chapter II Operating specifications

Chapter II Operating specifications

2.1 . Constant voltage output


The power supply provides two kinds

of power output modes: constant voltage output (CV) and constant current output (CC).

Under CV mode, the output voltage will be directly controlled by two knobs of coarse and fine adjustment. Under CC mode, the output current will be controlled by two knobs of coarse and fine adjustment. For example, the voltage is set as 16V, the current is set as the maximum rated value and the access load is 8./300W. 16V/8. = 2A < maximum rated value, so the constant voltage outputs 16v and 2A power supply.

Operation steps:

(1) Connect the output lead: connect the instrument output terminal to the load in the mode as follows.

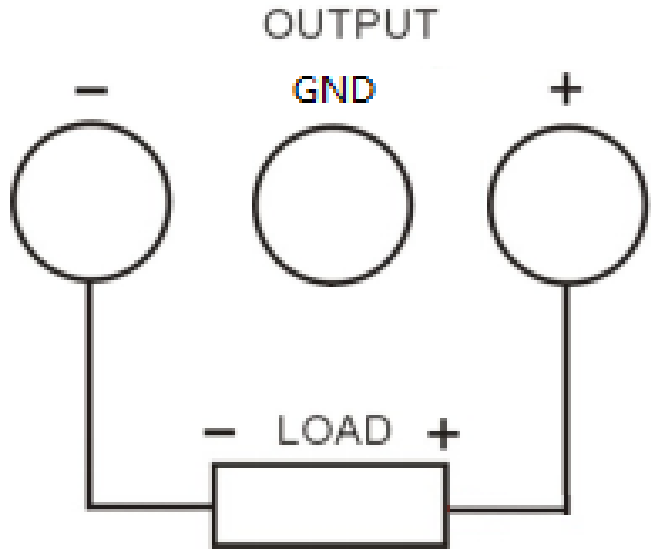

（2）Open power supply: press the power key and the starting instrument will enter the working status.

（3）Voltage setting: adjust two knobs of fine and coarse voltage adjustment and set the voltage as 16V.

（4）Current setting: adjust two knobs of fine and coarse voltage adjustment to set the constant current value as the maximum rated value.

（5）Open output: press .ON/OFF. Key (backlight will turn green) and the

instrument will work under the constant voltage output mode.

Hint: under CA mode, if the load changes cause the output current exceed the setting value, the instrument will be switched to CC mode according to the setting current, and the output voltage will be reduced proportionally. At this time, the current setting value will be increased and CV output will be recovered.


2.2 . Constant current output

For example, the voltage is set as 16V. the current is set as the maximum rated value 5A (eTM-305). The access load is 1./300W. because 1..5A = 5V < 16V and 16V/1. = 16A > 5A, the channel constant current will output 5V and 5A power.

Operating steps:

(1) Connect output lead: connect the instrument output terminal to load in the mode shown

in the following figure.

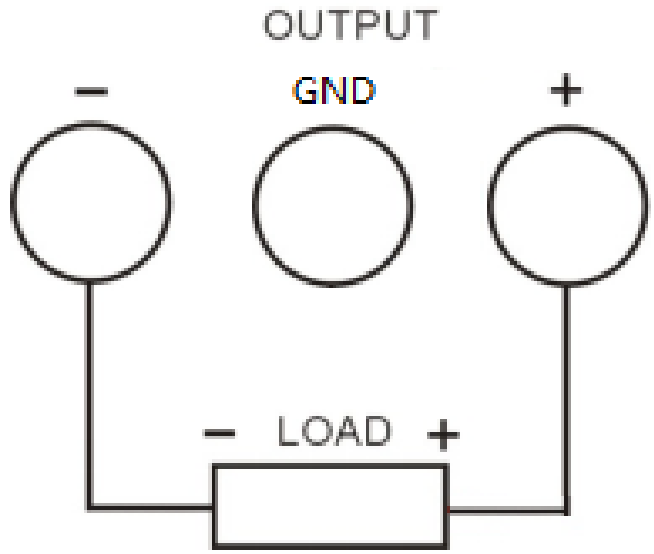

注意 Incorrect connection may cause damage to the product or equipment connected to this product.

（2）Open power supply: press the power key and the starting instrument will enter the working status.

（3）Voltage setting: adjust two knobs of fine and coarse voltage adjustment and set the voltage as 16V.

（4）Current setting: adjust two knobs of fine and coarse voltage adjustment to set the constant current value as the maximum rated value.

（5）Open output: press .ON/OFF. Key (backlight will be green) and the instrument will work under the constant current output mode.

Hint: under CC mode, if the load changes cause the output voltage cause the setting value, the instrument will be switched to CV mode according to current voltage, and the output current will be reduced proportionally. At this time, the voltage setting value may be increased and CC output will be recovered.

Chapter III Maintenance

3.1 Regular check

- In the product use process, in order to


ensure the product to achieve the best working conditions, please do check regularly.

- Check the power supply power input socket is burned. Check the power supply output terminal is loose.


3.2 Replacement of fuse

.Steps

(1) Take the power cord and take away the fuse box with a small screwdriver.

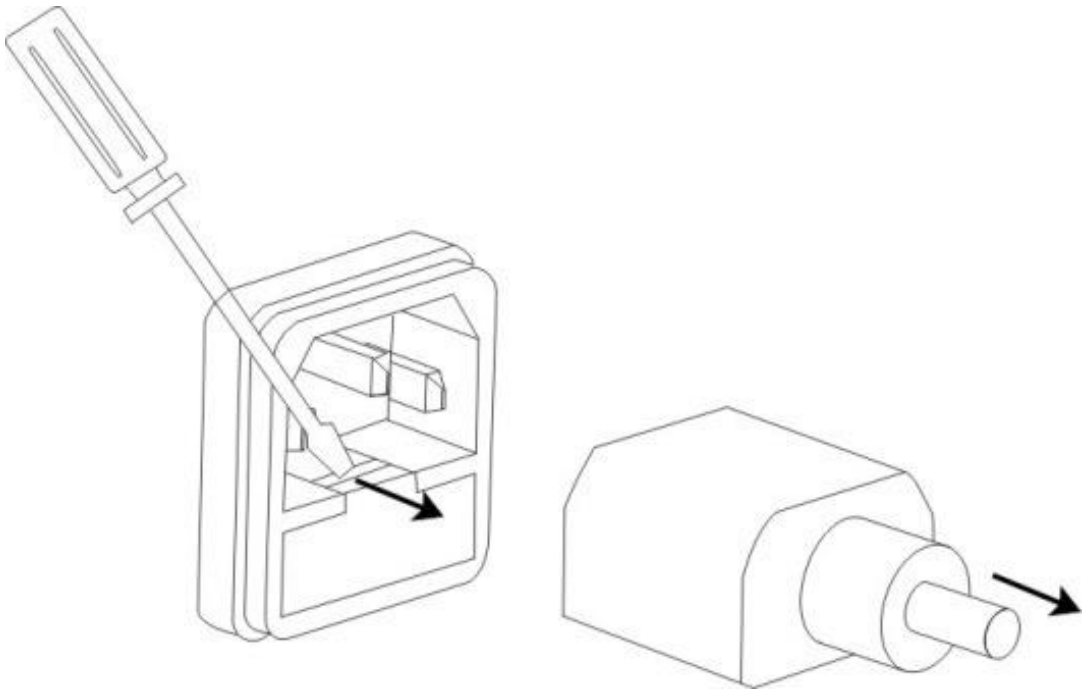

(2) Replace the fuse

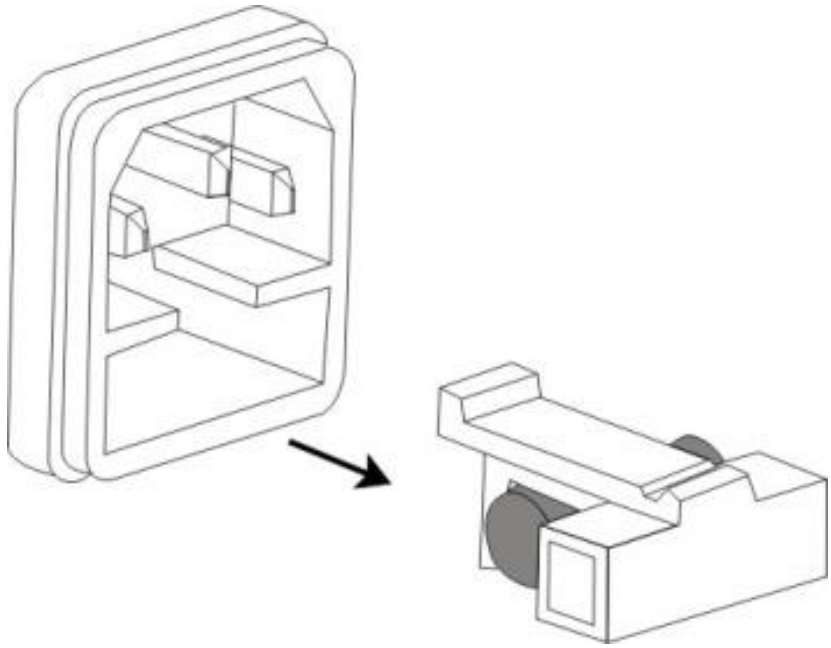

.Specifications for fuse：

220V：F10A/250V ；110V：F15A/250V

Chapter IV Performance indicators

.When using the specification, please ensure start up for above 10s.

4.1 output parameters：

Voltage stable range：≤2%

current stable range：≤0.5%

load stable range：≤0.5%

ripple and noise：≤1%（effective value）

4.2 voltage and current pre-set precision

Output voltage pre-set precision：± 0.1V

Output current pre-set precision：± 0.1A

4.3 Operating environment

. Indoor use

Elevation: ≤2000m

Environmental temperature: 5℃~ 40℃

Relative humidity: ＜80%

4.4 display resulution

Voltage resulution	＜100V: 10mV ≥100V: 0.1V

Current resulution	10mA
Power resulution	＜10W: 1mW ≧10W: 10mW ≧100W: 0.1W ≧1000W: 1W
equivalent load resulution	＜10R: 1mR ≧10R: 10mR ≧100R: 0.1R ≧1000R: 1R

4.5 .Storage environment

Environmental temperature: 0 – 70℃

Relative humidity: . ＜70%

4.6 Power input .

AC 220V.10%, 50Hz (110V input or 100V/220V manual switching)

4.7 Appendix: 1

Specifications **1**

Qualification certificate 1

Power line **1**

4.8 Product size

330(D)×250(W)×155(H)mm

4.9 outer package **size**

420(D)×310(W)×220(H)mm

4.10 Weight

About 5kg

Chapter V Declaration of toxic and hazardous substances inthe product

Part name	. Toxic or hazardous substances or elements					
	.(Pb) Lead	.(Hg) Mercury	.(Cd) Cadmium	.(Cr(VI)) Six valence chromium	.(PBB) Polybrominated biphenyl	(PBDE) Polybrominated Diphenyl Ethers

. printed circuit module	X	O	O	O	O	O
. Transformer	X	O	O	O	O	O
. Connecting line	X	O	O	O	O	O
. Hardwarebox	X	O	O	O	O	O
. Power line	X	O	O	O	O	O
Electric material	O	O	O	O	O	O

Rubber panel	O	O	O	O	O	O
Packing material	O	O	O	O	O	O

O: indicate the content of poisonous and harmful materials in the homogeneous materials is less than the limit specified in SJ/T11363-2006.

X: indicatethe content of poisonous and harmful materials in the homogeneous materials exceeds the limit specified in SJ/T11363-2006.

Specifications: This table shows that the product may contain these substances. However, this information may be updated with the development of Technology. The causes for labeling .X.: the alternative technology and parts conforming to *Measures for the Administration of Pollution Control of Electronic Information Products* are not provided currently.

Chapter VI Warranty service

1. thank you for choosing this power. Our

company will strictly implement the national .three warranty. policy. If the product quality problem is not caused by the artificial elements, you may repair, exchange or return the product against the invoice or .three warranty certificate.. If the project exceeds the warranty period, we only charge the expenses for replacing parts.

2. The following conditions are exempted from the warranty scope:

（1） Exceeding the effective term of .three warranty.

（2） Alter .three guarantee. certificate without authorization.

（3） The improper use, maintenance and safeguarding of product cause the damages.

（4） The natural disasters, grid fault or other

force majeure causes the product damages.

（5） The accessories are not in the warranty scope.

（6） The product model or number on .three guarantee. certificate are not consistent with the physical commodity.

3. The products to be repaired should be packed and transported properly. In case of damage or missing in the transporting process, our company will not assume any responsibility.

4. The warranty card should affix the seal of after-sales unit and the date to ensure your rights.

.Warranty card

.The card is the product warranty card. Please safe keep the card properly.

Product name (product model)	
.Purchase date	
.Sales unit	
.Customer name	
Customer address	
.Customer Tel.:	
.Fault description	